

ASSEMBLY INSTRUCTIONS B9530

Ax1



Bx1 (R&L)



Cx1



Dx1




Ex2 M6*16mm



F x2 M6*30mm Gx1 M6




1

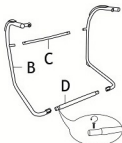

2



 3



4



5

