

1.

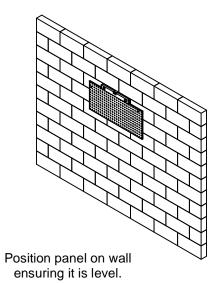


2.

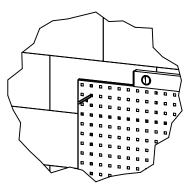


Mark holes on wall (minimum of 4)

3.

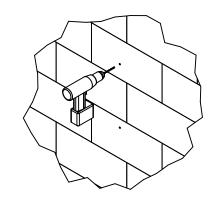


Drill holes to suit fixings. Check for pipes & cables first.

4.

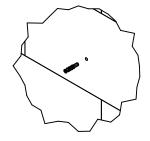


Fit wall fixing plugs (to suit wall type)

5.

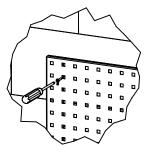

Screw panel to wall (minimum of 4 fixings)

6.

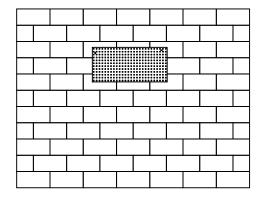

Check panel is firm and secure before fitting accessories.

PRODUCT: Perfo & Louvre Panels

DRG. NO.:

81032010

ISS: 001

PAGE:

1 of 1